


Upgrading Using a Serial Connection

Upgrading Using a CONV3USB / CONV4USB / 307USB

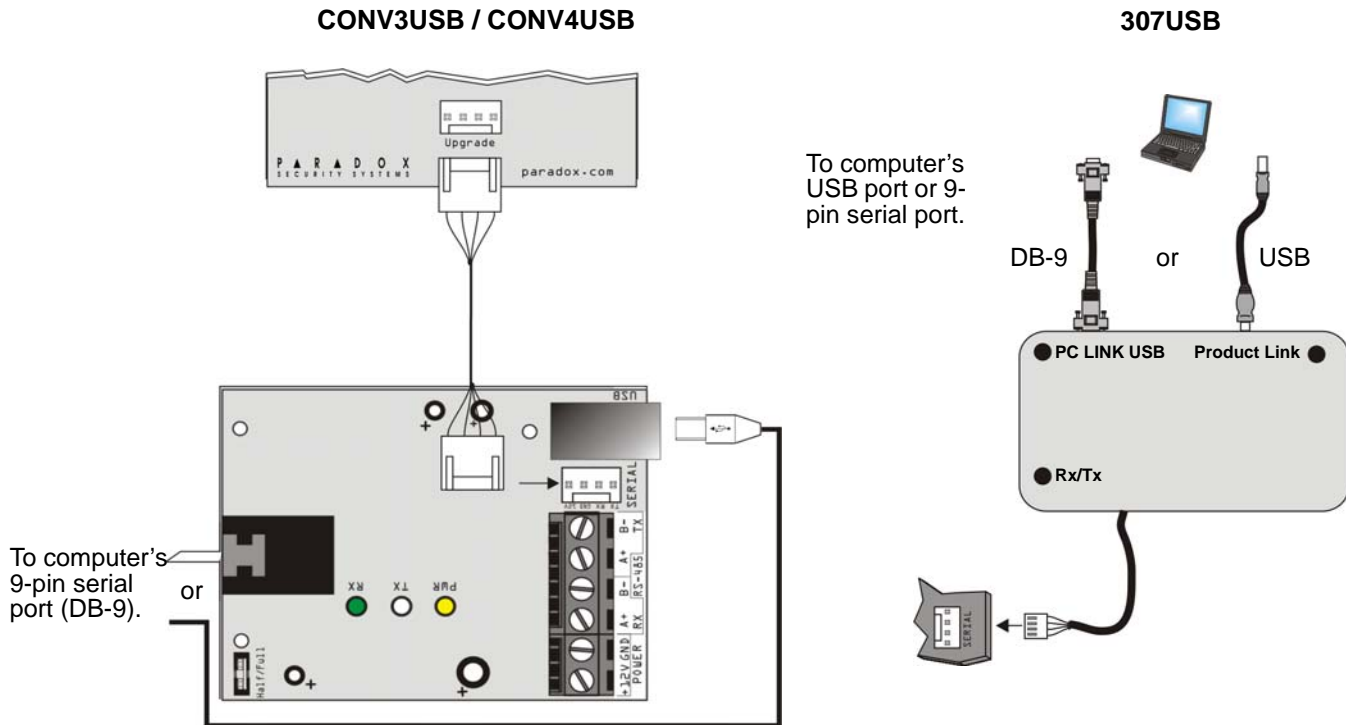

Upgrading Using a Four-Wire Connection

The CONV3USB or CONV4USB four-wire connection must be used when upgrading the following modules:

EVO641 keypad
EVO641R keypad

APR-PRT3 printer module
DGP-ACM12 access control module

DGP-R910 reader
DGP-R915 reader/keypad

